


ProVa-Shower System



FOR TILED SHOWERS

- All the components required to build a fully bonded water tight assembly for tiled showers.
- No waiting time between steps; tiles can be installed immediately.
- Protects wall cavities against water and vapour penetration.
- Prefabricated sloped pan eliminates mortar bed, reducing weight and installation time.
- All components sold separately.

48" x 48"
(122cm x 122cm)

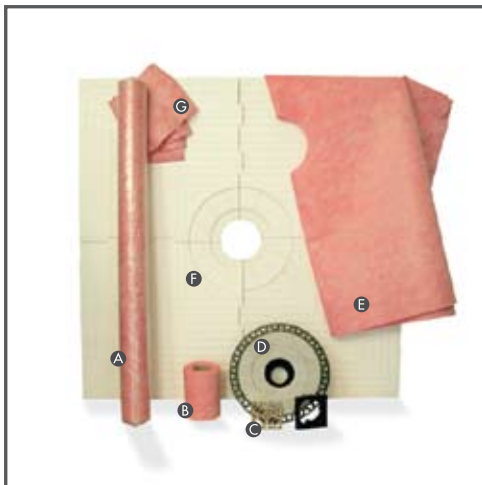

A complete, easy to install
WATERPROOFING SYSTEM
for maintenance-free tiled showers


- | | |
|----------------------|--------------------------|
| A. ProVa-Mat | E. ProVa-Mat floor panel |
| B. ProVa-Joint strip | F. ProVa-Pan |
| C. ProVa-Drain grate | G. ProVa-Corners |
| D. ProVa-Drain | |

Loxcreen
FLOORING GROUP

For more information please contact us
Tel: 1 (800) 565-6653
www.loxcreenflooring.com

ProVa-Shower System

FOR TILED SHOWERS

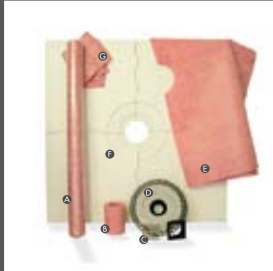

All the components necessary to build a fully bonded watertight assembly for tiled showers

- A. ProVa-Mat
- B. ProVa-Joint strip
- C. ProVa-Drain grate
- D. ProVa-Drain
- E. ProVa-Mat floor panel
- F. ProVa-Pan
- G. ProVa-Corners

Installation Highlights: For representative purposes only. Please consult Loxcreen Shower System technical literature for complete installation instructions.

